

Operating Instructions

Your Koss Portable Speakers feature a built-in amplifier for additional sound volume. Sound from the speakers requires either 6 "C" cell batteries or a 120 VAC to 6 VDC adapter.

A. To Operate with Batteries

1. Open battery compartment located at the back of each speaker. Remove cord.
2. Insert 2 "C" cell batteries in each speaker.
3. Connect DUAL PLUG CONNECTOR on left speaker to right speaker at connection marked "TO LEFT SPEAKER." Connect remaining wire with 3.5 mm plug to the headphone jack on your audio source.
4. Using speakers with an additional sound source, such as a CD-ROM drive, requires an additional 3.5mm plug to 3.5mm plug cable. Connect cable with 3.5mm straight plug to right speaker at "CD-ROM" input. Connect remaining end of cable (included) with 3.5 mm L-plug to the audio output on your additional sound source.
5. Replace battery covers.
6. Turn ON/OFF switch on back of right speaker to "ON." Note: Amplifier will not function unless speakers are on.
7. Set "INPUT SELECTOR" to audio source.
8. Turn on audio source.
9. Adjust sound in the following ways: Turn volume control to desired level; push Bass Boost button located on right speaker to "ON" for added bass; push Treble Boost button on right speaker to "ON" for added treble
10. Operating a microphone through your speakers require an additional 3.5mm plug to 3.5mm plug cable (included). Connect cable with 3.5mm straight plug to right speaker at input marked "MIC" on back of speaker. Plug the remaining 3.5mm L--plug into the mic input on audio source. Connect your microphone to the front of your speakers at "MIC" input (microphone not included).

B. To Operate with AC Adapter

1. Open battery compartment located at the back of both speakers and remove wires.
2. Replace battery covers.
3. Connect DUAL PLUG CONNECTOR on left speaker to right speaker at connection marked "TO LEFT SPEAKER."
4. Connect remaining wire with 3.5mm plug to headphone jack on your audio source.
5. Connect AC adapter (not included) to back of left speaker at connector marked "DC 6V." Plug remaining end of AC adapter into wall outlet. Be sure your AC adapter is built with the center pin as ("-") negative. Connect remaining wire with 3.5mm plug to the headphone jack on your audio source.
6. Turn ON/OFF switch at back of right speaker to "ON."
7. Set "INPUT SELECTOR" switch to audio source.

8. Turn on audio source
9. See Step 9 in Section A for sound level adjustment.

Trouble Shooting Guide

No Sound

1. Check volume controls on audio source and speakers.
2. Check that "INPUT SELECTOR" switch is set to correct sound source.
3. Check that components and speaker are switched on.
4. Check batteries.

Sound From Only One Speaker

1. Check balance controls on audio source.
2. Check speaker installation instructions.
3. Check connection between audio source and speaker input connection.

Weak Bass

1. Push Bass Boost button on front of right speaker to "ON" position.

Lacks High Range Clarity

1. Push Treble Boost button on front of right speaker to "ON" position.